

SAMUEL HEATH


Product Data Sheet

N6763 Back to Back Shower Door Knobs



Installation

N6763

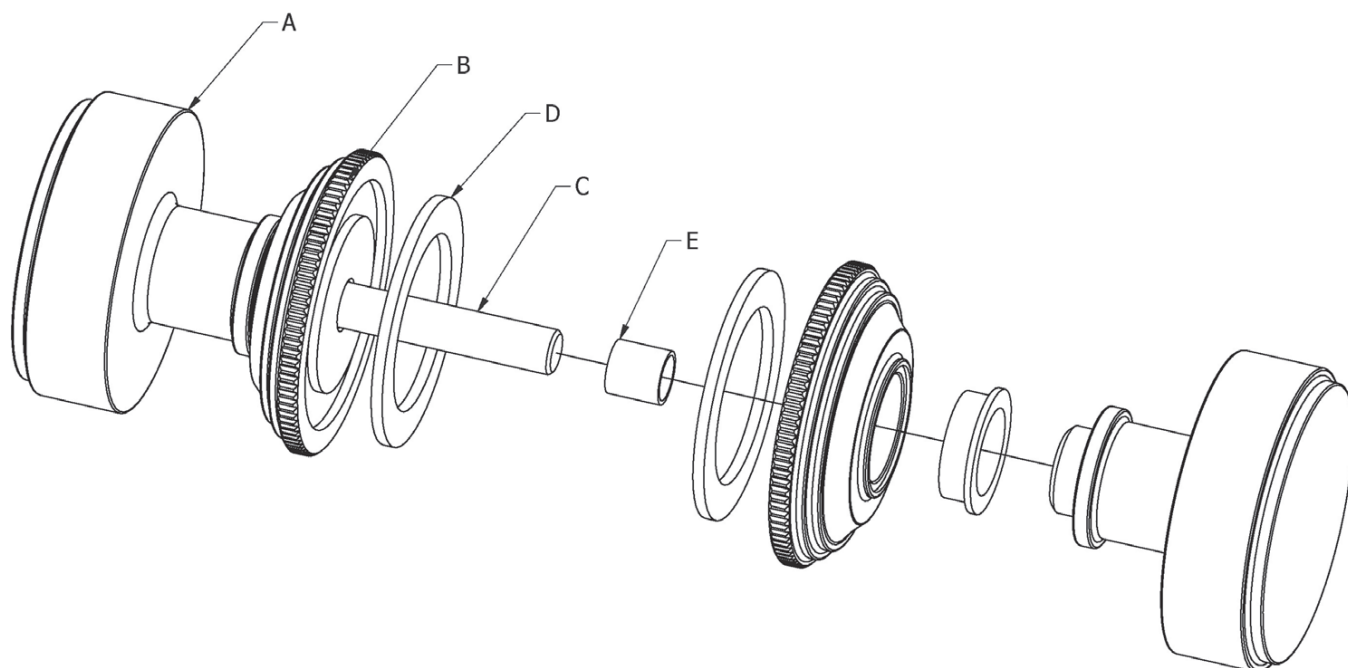

1. Assemble knob (A), rose (B), allthread (C) through the pre-drilled hole in the glass. Ensure that rubber washer (D) and protective sleeve (E) are used to protect the glass.
2. Assemble the second set of components to the other side of the glass.

Note: It is recommended that a suitable thread lock is applied to the allthread during fitting

SAMUEL HEATH
Head Office and Customer Service
Leopold Street
Birmingham
England
B12 0UJ

T: +44 (0)121 766 4200

Info@samuel-heath.com
www.samuel-heath.co.uk

US Customer Service
usa@samuel-heath.com
Federal I.D. No. 58-1504682
www.samuel-heath.com

9-3047
Issue B