

SAMUEL HEATH

Product Data Sheet

T1101-T Trim to suit V1133-IS

T1102-T Trim to suit V1111-IS, V1112-IS, V1134-IS

T1102-T Trim to suit V1132-IS, V1135-IS

T1105-T Trim to suit V1132-IS, V1135-IS



T1101-TLA



T1102-TLA




T1103-TLA



T1105-TLA


Control Options

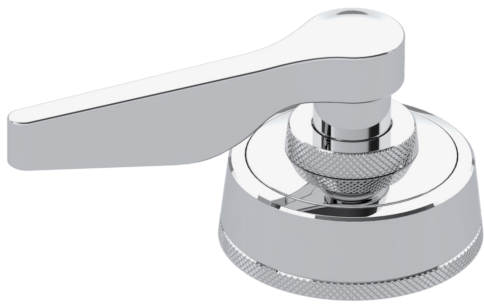

LA




LB

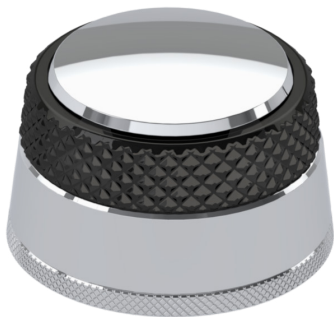

CBR






CCR



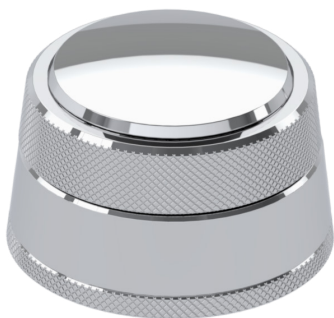


R

Dimension Key T1101-TLA

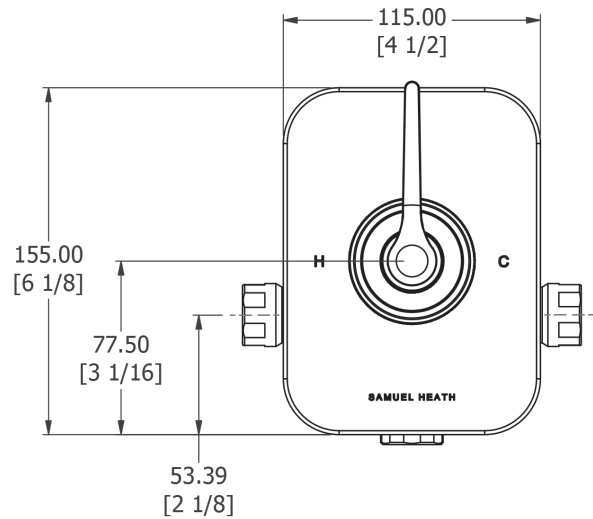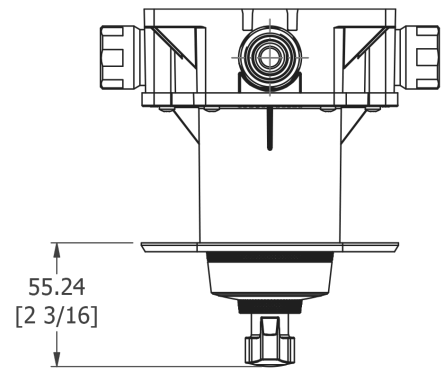
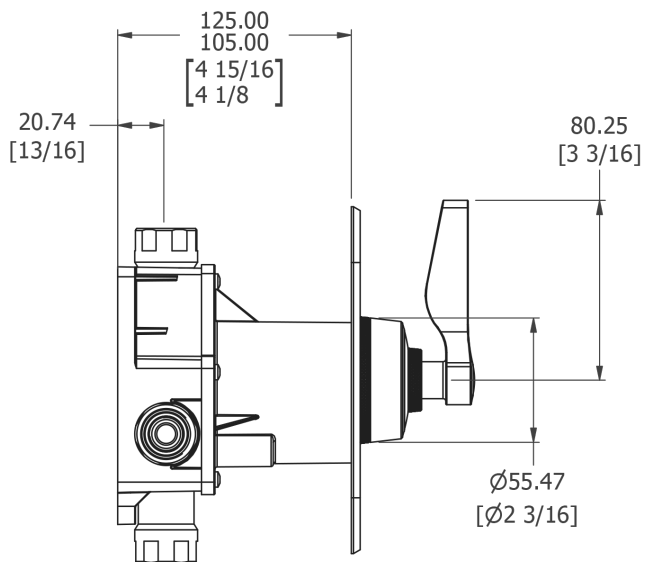


Dimension Key T1102-TLA

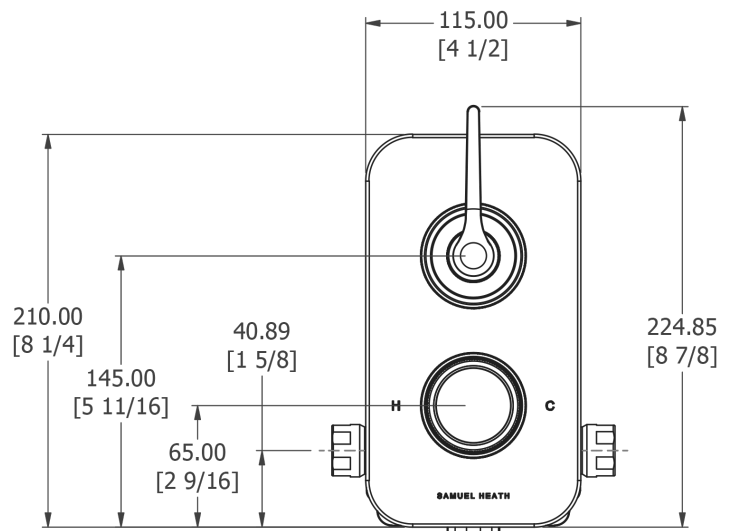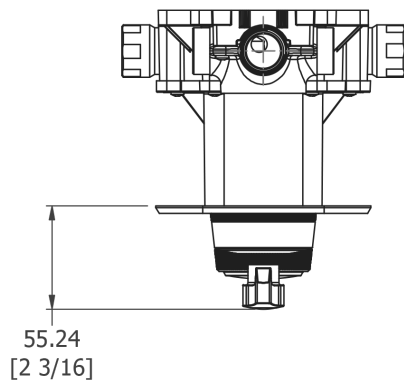
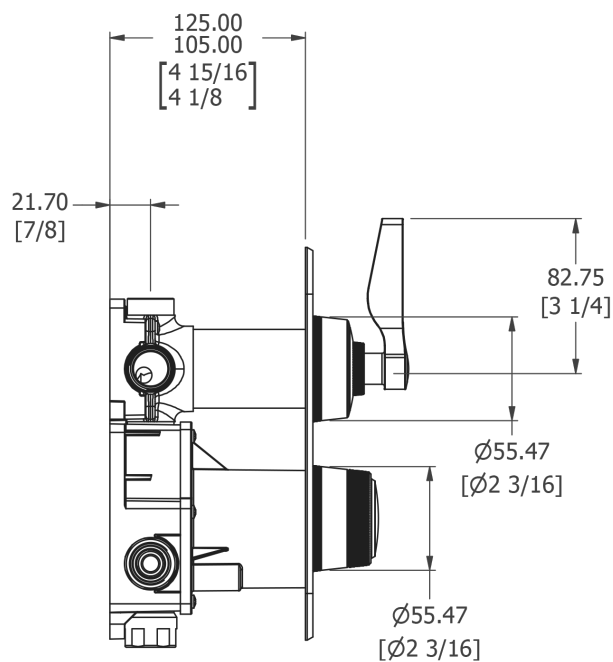


For additional lever dimensions, see website.

Dimension Key T1103-TLA

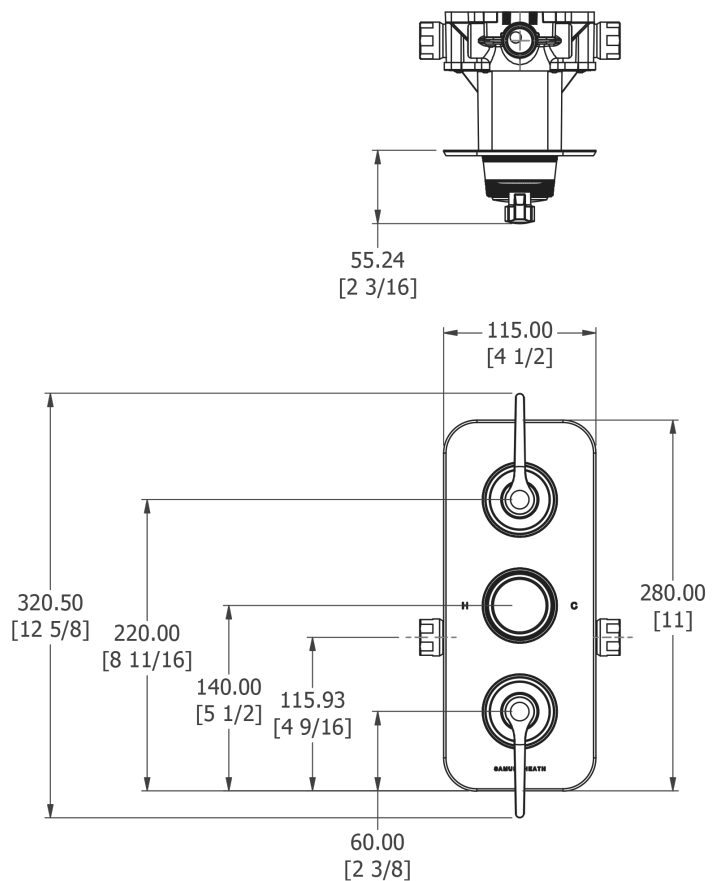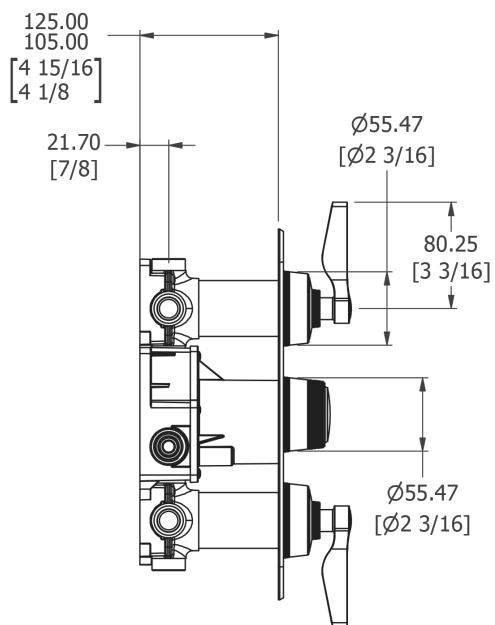


Dimension Key T1105-TLA

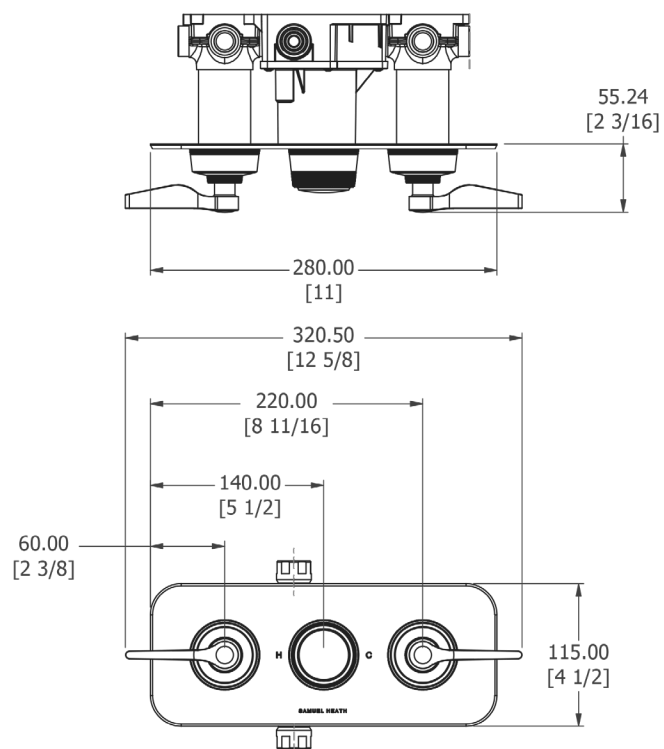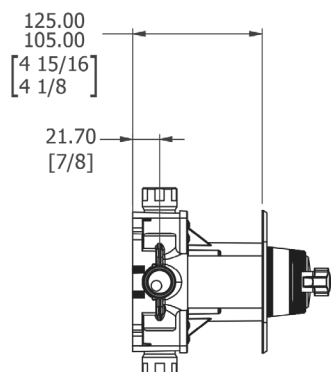

Spares Information


T1101-T

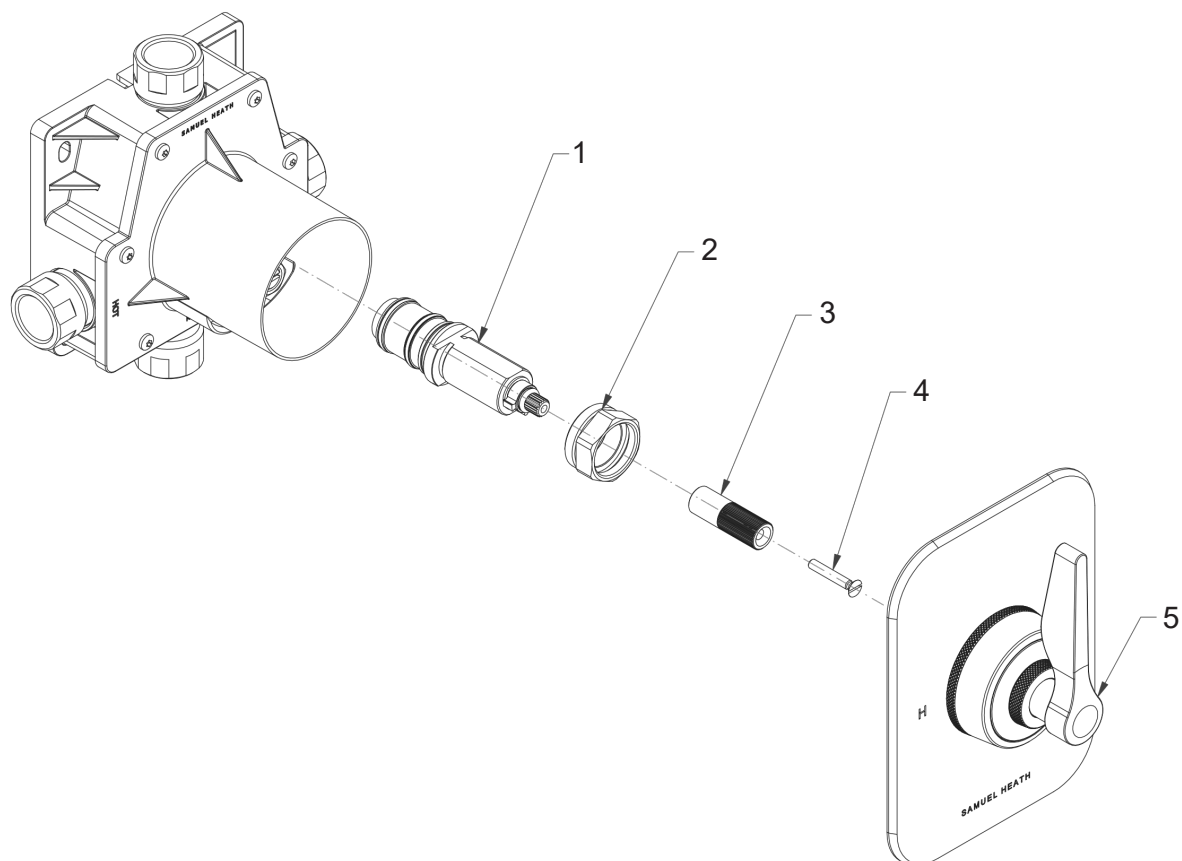

Item	Part No.	Description
1	VS50809	Thermostatic Cartridge
2	-	Thermo Lock Nut
3	-	Thermo Spline Adaptor
4	-	Thermo Screw
5	-	Thermo Control

Spares Information

T1102-T

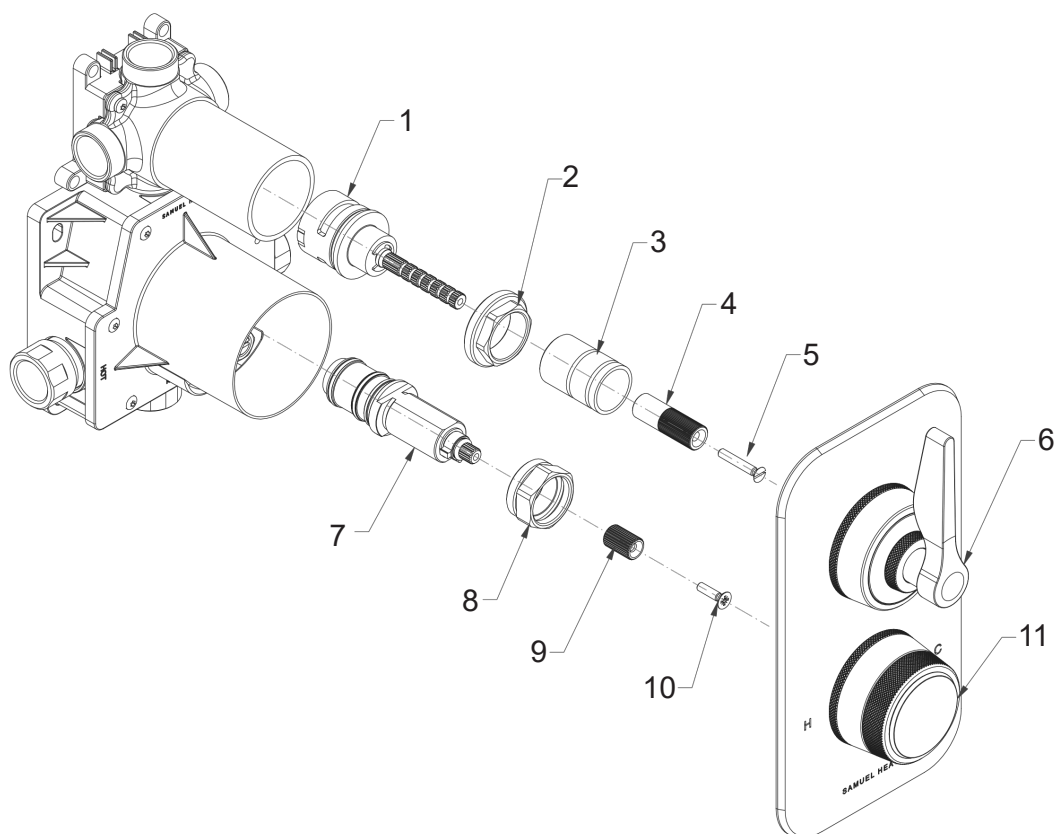


Item	Part No.	Description	Item	Part No.	Description
1	VS50814-1 Volume	Control Cartridge	6	-	Volume Control
	VS50814-2 2 Way Diverter		7	VS50809	Thermostatic Cartridge
2	-	Thermo Lock Nut	8	-	Thermo Lock Nut
3	-	Threaded Shank	9	-	Thermo Spline Adaptor
4	-	Volume Spline Adaptor	10	-	Thermo Screw
5	-	Volume Screw	11	-	Thermo Control

Spares Information


T1103-T/ T1105-T

Note: For T1105 the T1103 is Horizontal

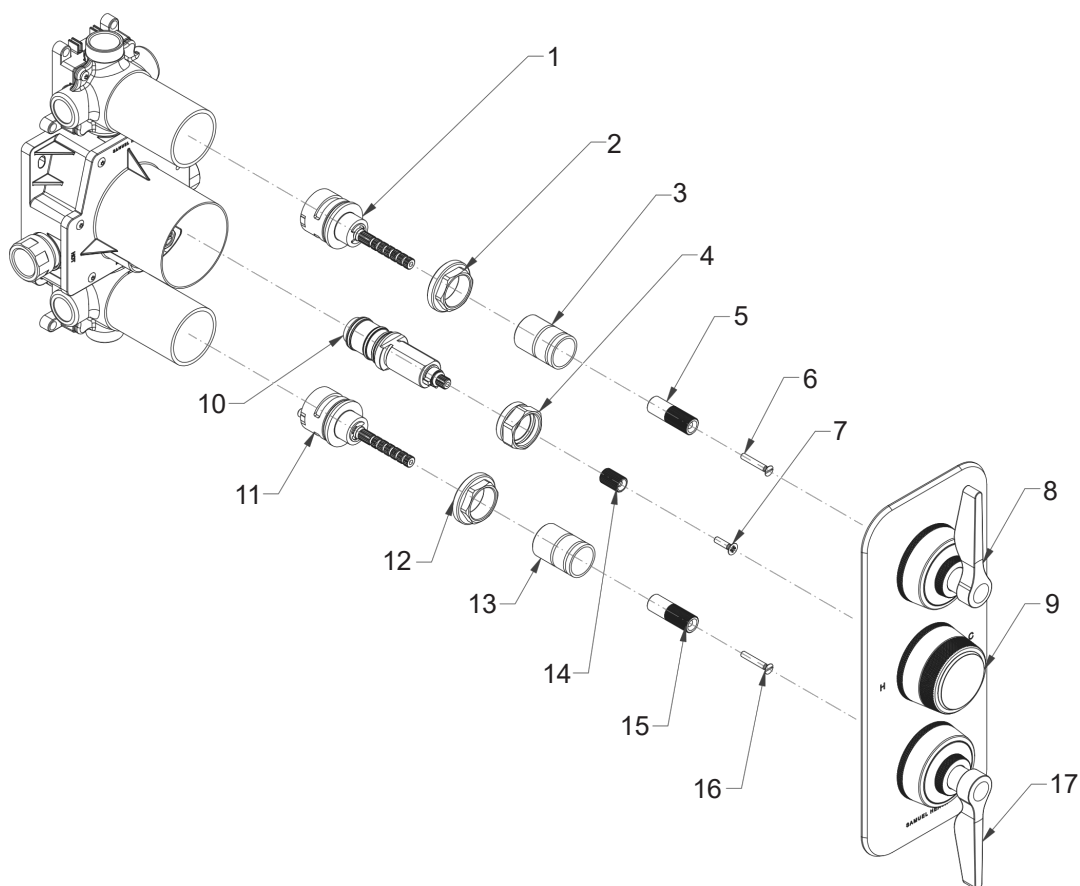

Item	Part No.	Description	Item	Part No.	Description
1	VS50814-1 Volume	Control Cartridge	9	-	Thermo Control
	VS50814-2 2 Way Diverter		10	VS50809	Thermostatic Cartridge
2	-	Volume Lock Nut	11	VS50814-1 Volume	Control Cartridge
3	-	Threaded Shank	12	-	Volume Lock Nut
4	-	Thermo Lock Nut	13	-	Threaded Shank
5	-	Volume Spline Adaptor	14	-	Thermo Spline Adaptor
6	-	Volume Screw	15	-	Volume Spline Adaptor
7	-	Thermo Screw	16	-	Volume Screw
8	-	Volume Control	17	-	Volume Control

Installation

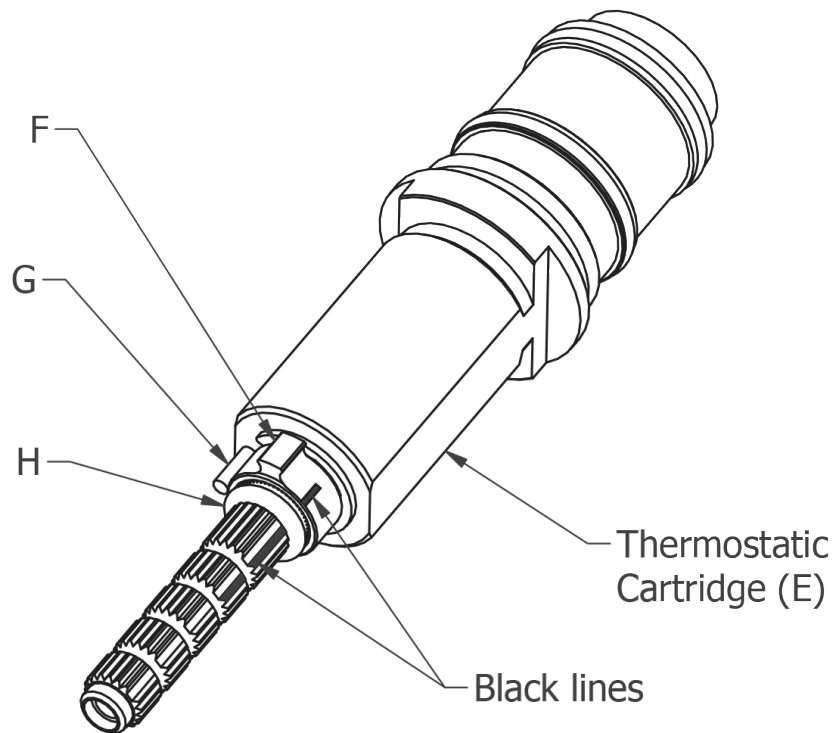


Thermostatic Cartridge Information

- The thermostatic cartridge has been calibrated to 38 degrees Celcius during assembly, when the two black lines on the thermostatic cartridge line up, this is the set point.
- PLEASE NOTE - incoming water temperatures vary between different installations. During installation, the plumber should use a thermometer to re-calibrate the minimum and maximum temperature.
- The temperature is limited by the rotating collar (F) and the stop pin (G). To change the temperature at the maximum and minimum point, slide o-ring (H) and rotating collar (F) forward and rotate the position of the rotating collar (F) relative to the stop pin (G).

NOTE: Rotate the rotating collar (H) clockwise to make the water hotter, and anticlockwise to make the water colder.


WARNING: It is not recommended to exceed a safety limit stop of 37.8 degrees Celcius/100 degrees Fahrenheit.

Installation

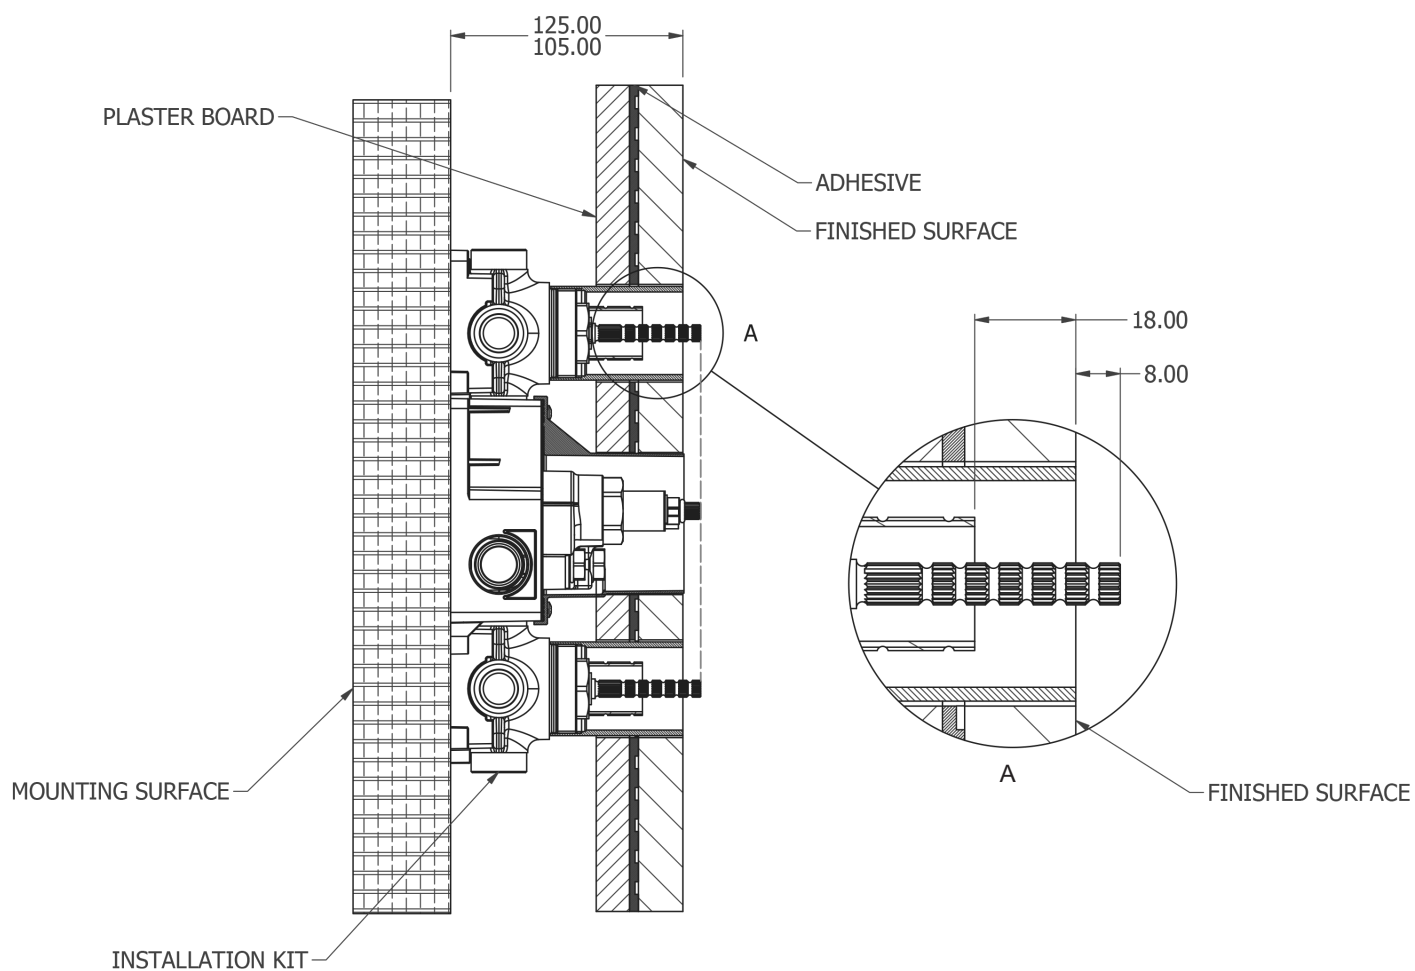

1. The thermostatic cartridge (A) requires its length reduced to the dimensions shown from the finished wall surface.


Installation

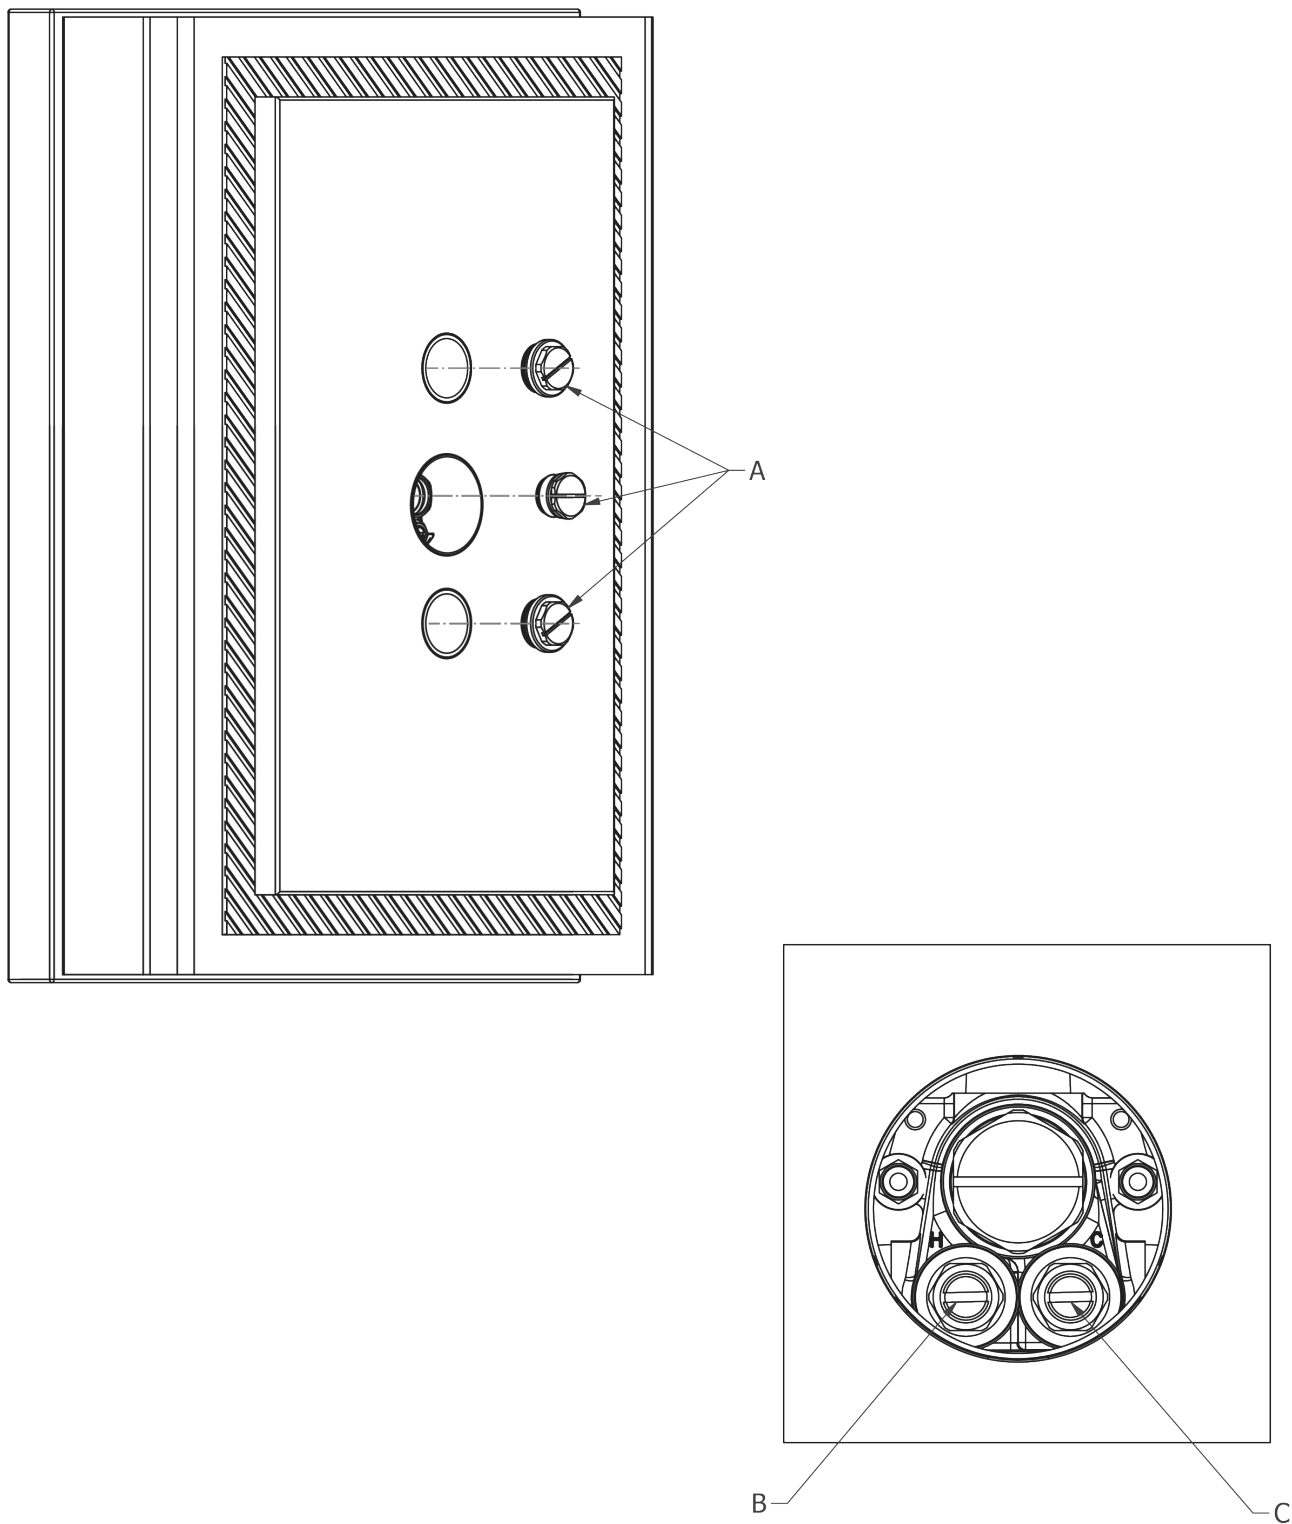

Installation:

1. Remove blanking plugs (A) from the Valve.

Note: The water inlets can be isolated by turning the flat head screw clockwise on the hot service cartridge (B), and cold service cartridge (C).

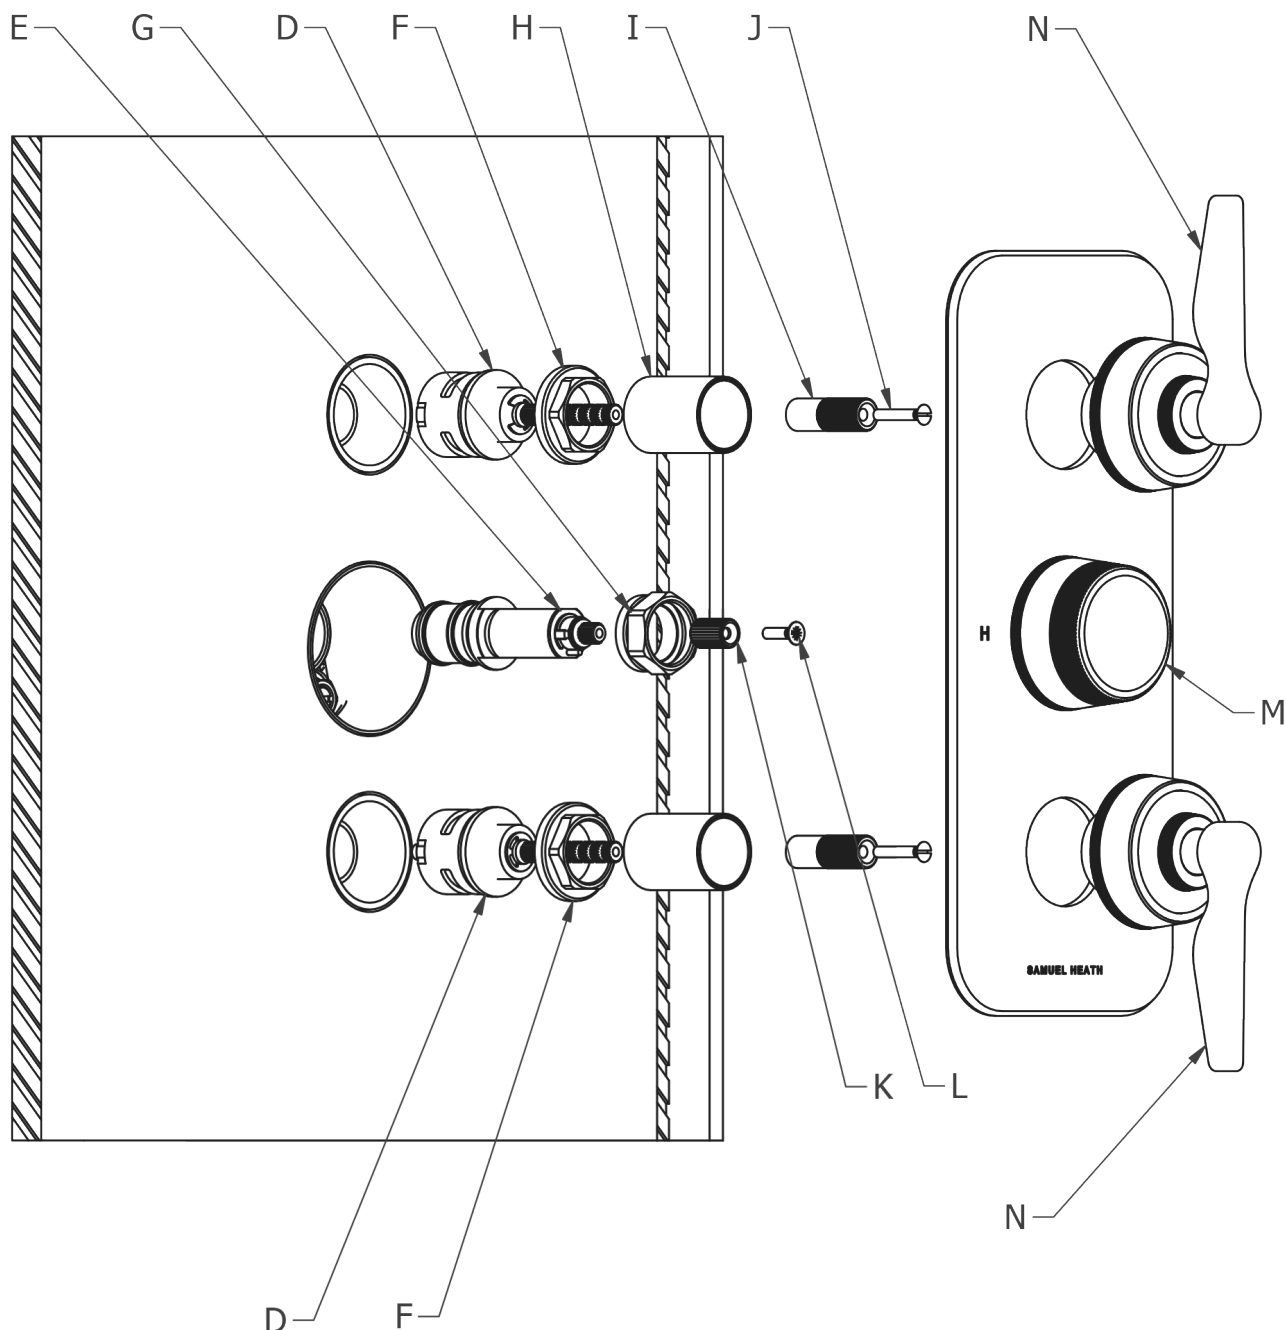

Note: Items D, E, and H must be cut down to achieve the projections shown in this booklet.

2. Install the volume/diverter cartridges (D), and thermostatic cartridge (E) into the valve. Secure these in place using locking nuts (F and G).

3. Assemble the spline adaptors (I) to the volume/diverter cartridges, and secure using screws (J). Assemble the spline adaptor (K) to the volume/diverter cartridges, and secure using screws (L).

4. Assemble the thread collars (H).

5. Push the shower plate and thermo control assembly (M) onto the shower valve. Apply a suitable silicon sealant between the shower plate and finished surface.

6. Assemble the volume/diverter control trims (N) to the valve.

IMPORTANT NOTES

1. Installation should be carried out by a competent engineer, in accordance with water regulations.
2. Before installation ensure supply pipes are flushed clean as debris or loose particles will affect the efficiency of the ceramic disc cartridge.
3. For mixer taps it is recommended that hot & cold pressures are equally balanced.
4. To help maintain the high quality finish please clean with a soft damp cloth. Do not use abrasive polish or cleaners. Stains may be removed using diluted washing up liquid.
5. Ceramic cartridges in hard water areas. To prolong the lifespan and reduce servicing periods of your Samuel Heath tap we recommend that a suitable water softener be fitted. Consult your installer/designer for details.
6. Please note that as with all tap and shower ware it will be necessary from time to time for the products to be serviced, this should be carried out by a qualified Plumbing Engineer.

NOTES IMPORTANTES

1. L'installation doit être faite par un ingénieur qualifié, selon les règlements du Service Eau.
2. Avant l'installation, il faut s'assurer que les tuyaux d'approvisionnement sont complètement purgés. Les déchets flottants auront un effet détriminaire sur l'efficacité de la cartouche céramique.
3. Il est recommandé que les pressions de l'eau chaude et eau froide des mitigeurs et mélangeurs soient maintenues à un niveau égal.
4. Pour conserver la finition de haute qualité, nettoyer avec un chiffon doux et humide. N'employer jamais de la cire et des produits abrasifs. Les tâches peuvent être enlevées à l'aide de liquide vaisselle pur.
5. Cartouches en céramique dans les régions à eau calcaire. Pour prolonger la durée et réduire l'entretien de votre robinetterie Samuel Heath, nous recommandons d'utiliser un adoucisseur d'eau convenable. Veuillez consulter votre installateur/fournisseur pour plus de renseignements.
6. Veuillez noter qu'un entretien sera nécessaire de temps en temps et doit être effectué par un installateur qualifié.

WICHTIGE HINWEISE

1. Installation sollte durch einen kompetenten Fachmann und nach den üblichen Vorschriften ausgeführt werden.
2. Vor Installation Wasserleitung gründlich durchspülen. Verschmutzung wird die Funktion der Kartusche erheblich einschränken.
3. Für Mischbatterien ist es wichtig, daß Wasser mit gleichem Druck eingeführt wird.
4. Um den optimalen Zustand dieses Produktes zu erhalten, wischen Sie es bitte nur mit einem feuchten, weichen Lappen ab. Auf keinen Fall Scheuermittel verwenden. Flecken lassen sich mit unverdünntem Geschirrspülmittel entfernen.
5. Keramikkartuschen in Hartwasserbereichen. Um die Lebensdauer zu verlängern und Wartungszeiten zu reduzieren empfiehlt Samuel Heath den Einsatz eines geeigneten Wasserenthärter. Fragen Sie Ihren Installateur/Designer um Rat.
6. Bitte merken Sie, dass alle Armaturen ab und zu eine Wartung brauchen. Diese soll durch einen kompetenten Installateur ausgeführt werden.

ATENCION

1. La instalación se debe realizar por un fontanero.
2. Antes de la instalación, deben pulgar las tuberías dejando correr el agua por las tuberías para que arrastren los residuos de montaje/obra, con el motivo de que no afecte la eficacia del cartucho de cerámica.
3. Para grupo baño/ducha se recomienda que las presiones del agua caliente y frío sean equilibradas.
4. Para ayudar a mantener el acabado de este producto, limpiar con un paño húmedo suave. No se debe emplear productos abrasivos de baño. Las manchas se pueden quitar empleando líquido lava-vajillas puro.
5. Cartuchos cerámicos en áreas de aguas duras. Para prolongar su vida útil y reducir los periodos de reparación de su grifo Samuel Heath recomendamos la instalación de un descalcificador de agua. Consulte a su instalador para más detalles.
6. Igual que con todo tipo de grifería y duchas, de vez en cuando será necesario llevar a cabo una revisión al producto; esto debería ser realizado por un fontanero calificado.

ATTENZIONE

1. L'impianto deve essere montato da personale tecnico in conformità alle vigenti leggi.
2. Prima dell'installazione assicurarsi che le tubature dell'acqua siano pulite. Detriti o residui di lavorazione compromettono l'efficienza del cartuccio.
3. Per i gruppi, si raccomanda che le pressioni acqua calda e acqua fredda siano ugualmente bilanciate.
4. Per mantenere la finizione di ottima qualità, pulire con un panno soffice e inumidito. Non usare creme lucidanti e materiali abrasivi. Le macchie potranno essere tolte usando del detersivo per piatti puro.
5. Come con tutti i tipi di rubinetti e docce, di volta in volta è necessario effettuare una revisione al prodotto; questo dovrebbe essere fatto da un idraulico qualificato.

SAMUEL HEATH

Head Office and Customer Service

Leopold Street
Birmingham
England
B12 0UJ

T: +44 (0)121 766 4200

Info@samuel-heath.com
www.samuel-heath.co.uk

US Customer Service
usa@samuel-heath.com
www.samuel-heath.com

8-40779
Issue: A