

SAMUEL HEATH

Product Data Sheet

V136-ADAP / V230-ADAP / V630-ADAP

Freestanding Leg Adapters



V136-ADAP



V230-ADAP




V630-ADAP




For more technical information visit:
www.Samuel-Heath.com

Fitting Instructions

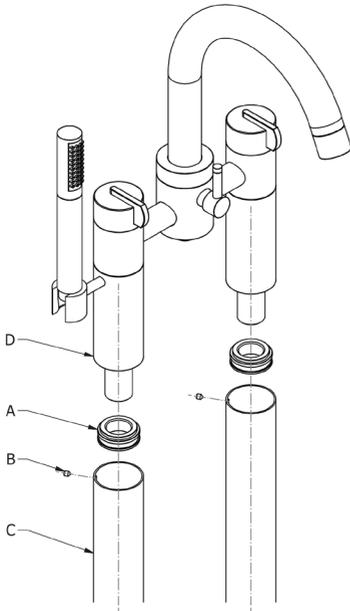

V136-ADAP

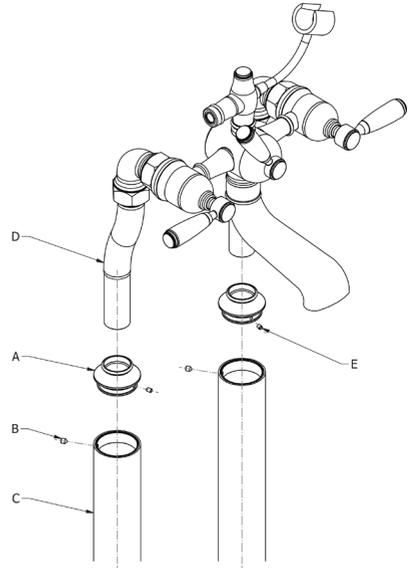

V230-ADAP / V630-ADAP

1. Screw the adapters (A) onto the legs of the bath / shower mixer (D).
2. Connect the flexi pipes onto the bath / shower mixer (D) and thread these through standpipe legs (C).
3. Secure the bath / shower mixer (D) to the standpipe legs (C) using grub screws (B)
4. Connect flexi pipes to the water supply under the floor.
5. Screw the stand pipe legs (C) to the floor.

SAMUEL HEATH
Head Office and Customer Service
Leopold Street
Birmingham
England
B12 0UJ

T: +44 (0)121 766 4200
F: +44 (0)121 772 3334

Info@samuel-heath.com
www.samuel-heath.com

US Customer Service
Federal I.D. No. 58-1504682
www.samuel-heath.com

8-40294
Issue: C